
layout


installation

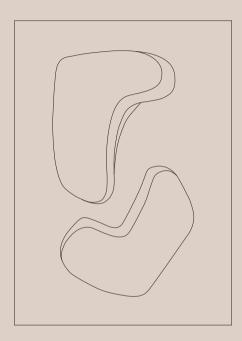


form no_007

Instruction Manual & Specifications

Form No_007 is a sculptural wall sconce carved by hand and fired in bisqueware.

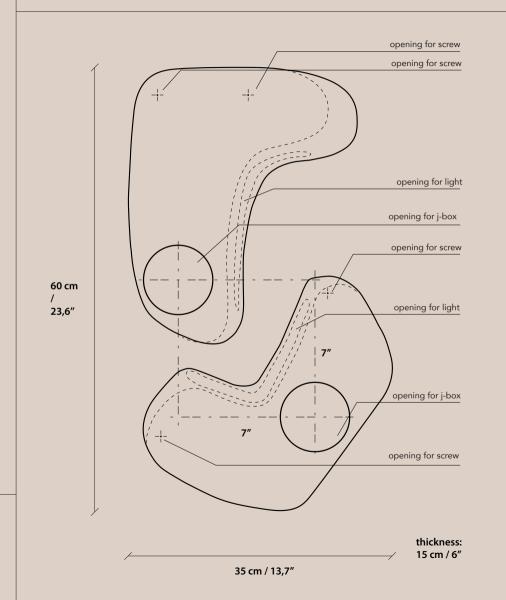

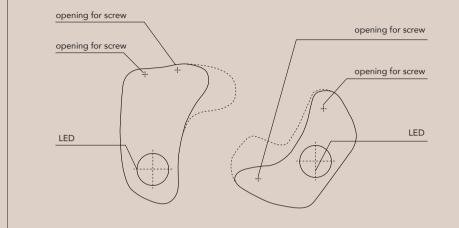

- 01. Turn off the electricity supply.
- 02. Drill holes in the designated locations on the wall.
- 03. Insert 4x screw plugs into the drilled holes.
- 04. Screw 4x screws into the plugs, leaving them 1 inch from the wall, to secure them in place
- 05. Proceed to connect the socket to the electricity supply, then screw it tightly in place.
- 07. Insert 2x bulbs into the sockets of the lamp.
- 08. Hang the ceramics on the screws securely.

